

### KM16-18 Abrasive Mire Saw

No.	Part No.	Description	QTY
1	002-005	Saw Arm	1
	044-004	Spindle Bearings (Not Shown)	2
2	831-021	Trunnion Set	1
3	701-010	Spindle W/Tight Flange	1
4	292-011	Loose Flange	1
5	560-047	Spindle Pulley	1
	049-004	Spindle Bushing (Not Shown)	1
6	560-046	Motor Pulley	1
	049-003	Motor Bushing (Not Shown)	1
7	051-005	V-Belts (Three Required)	3
8	562-023	Trunnion Pin	1
9	486-010	Motor Mount Plate	1
10	486-019	10Hp 3Ph	1
11	342-052	Wheel Guard	1
12	293-009	Mitre Fence	1
13	050-031	Mitre Base Top	1
14	829-029	Mitre Plate Table	1
15	716-018	Stand & Base Assembly	1
16	431-011	Front Vise Jaw	2
17	912-017	Vise Assembly (Less Jaws)	2
18	381-011	Handle (Hold Down)	1
19	696-020	Tension Screw	1
20		Locking Screw	1
21	053-020	Hold Down Block	1
22	699-025	Vise Spacer	2
23	699-024	Fence Spacer	2
24	454-006	Lock Nut	1
25		Acorn Nut	1
26		Jam Nut	1
27	700-016	Bearing (Base)	4
	700-011	Table Bearing Assembly (Not Shown)	4
28	700-020	Bearing (Top)	1
29	342-039	Belt Guard	1
		Switch (Call For Part Number)	1
30	702-006	Spindle Assembly (Optional)	1
	002-005AS	Arm Assembly (Arm and Spindle Assembly)	1

**KI** **KALAMAZOO  
INDUSTRIES, INC.**

6856 East K Avenue  
Kalamazoo, MI 49048  
269-382-2050 PH  
269-382-0790 FAX

[www.kalamazooindustries.com](http://www.kalamazooindustries.com)

